 
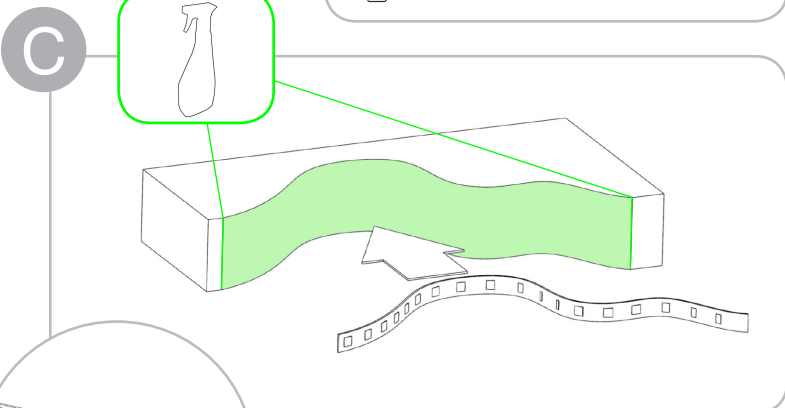 
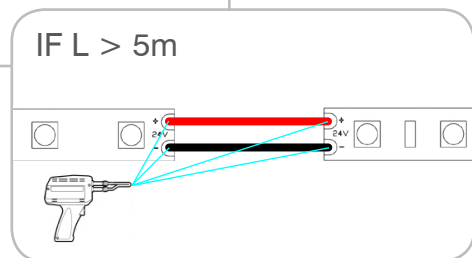 
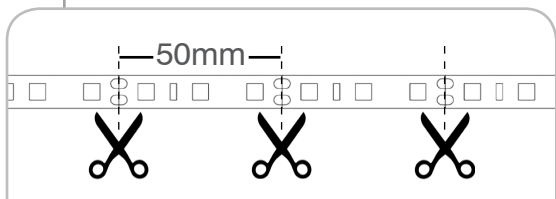 
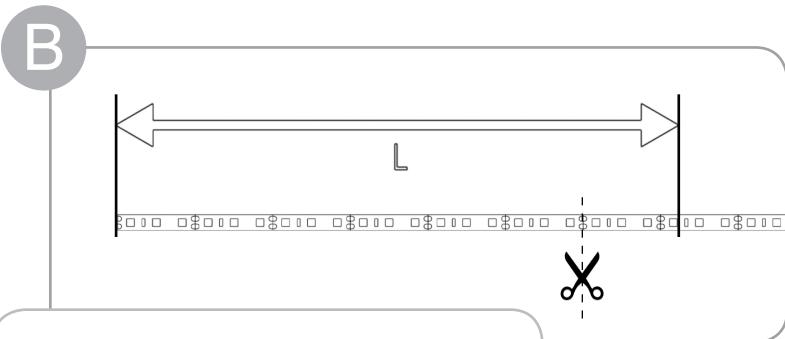 


INSTALLATION SHEET

MILES

flexible LED strip light

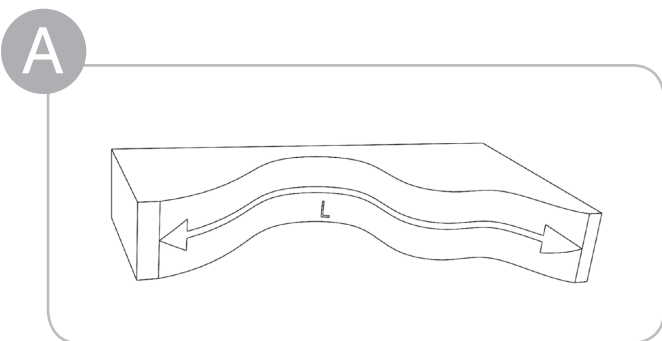

class II wiring

driver: constant voltage driver, 24V DC

IMPORTANT INSTRUCTIONS

read and follow these instructions before installing or maintaining this product



location

- this product is available for **dry indoor OR outdoor location. Choose accordingly.**
- make sure this product is NOT on the same circuit as inductive loads, (e.g. fluorescent bulbs, discharge bulbs, ventilation fans, etc...)

safety

- Do not switch on line voltage until all wiring has been complete
- Incorrect wiring will result in irreparable damage to the LED and power supply
- This product should only be installed by a licensed electrician

INSTALLATION

switch off the line voltage supply

- A** Measure the linear length necessary
- B** Cut the strip accordingly. **The strip can only be cut at places marked by a scissor mark**

Without removing the self-adhesive backing, verify that the length is right by placing the strip in place

- C** Make sure the installation surface is clean, free from dirt particles, oils and silicon coating

Remove the self-adhesive backing, position the strip and press firmly in place

Connect the strip to power supply and the power supply to main voltage

WARRANTY

- This product must be installed in accordance with all applicable installation codes and ordinance
- Limited two (2) years warranty
- Warranty is void in the eventuality of unauthorized modifications and/or improper use



www.sensolighting.com
info@sensolighting.com
T 403.216.7043
F 403.216.7045



512 Manitou Road SE, Calgary, Alberta T2G 4C4