



# INSTALLATION SHEET

## ARES I, II, III recessed light fixture, square trim

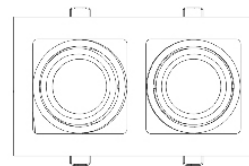


### A CUTOUT:


**ARES I**  
3-1/4" x 3-15/16"  
(95 x 100mm)

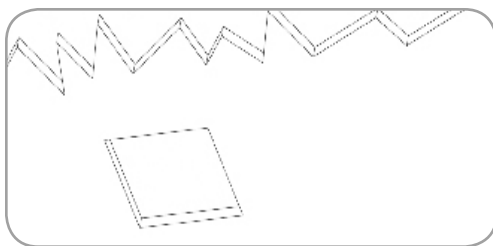


**ARES II**  
3-15/16" x 7"  
(100mm x 95mm)

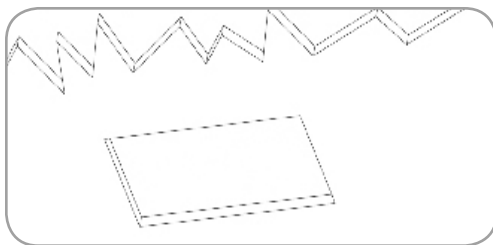


**ARES III**  
3-15/16" x 10-1/2"  
(100mm x 265mm)

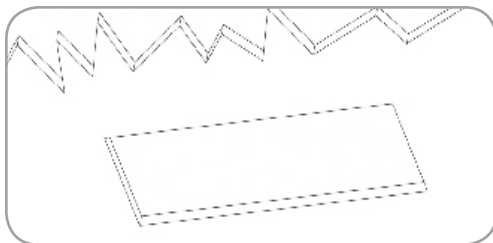


### B

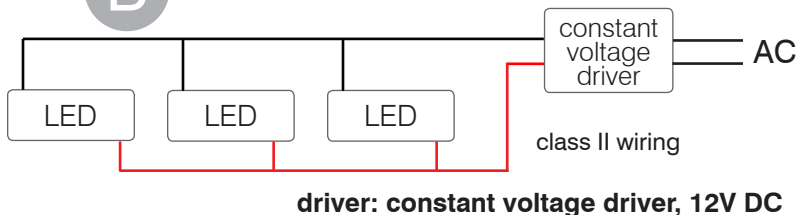

### C

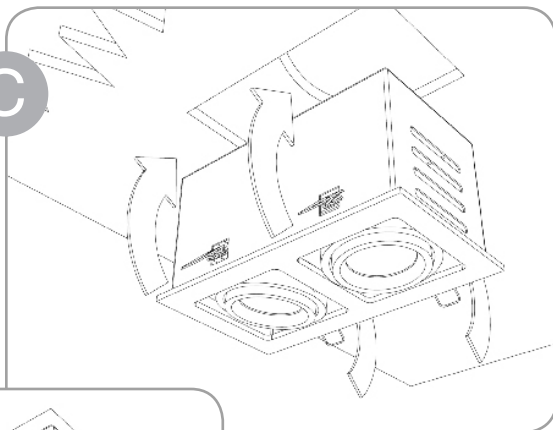

### D

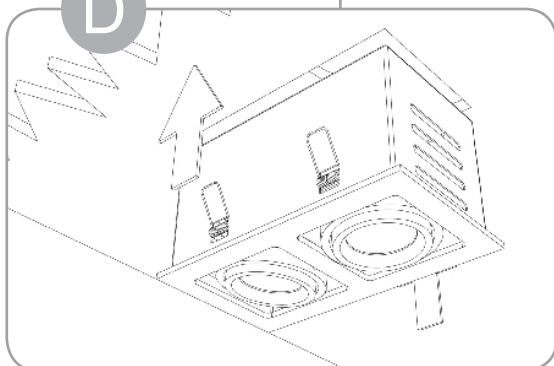

www.sensolighting.com  
info@sensolighting.com  
T 403.216.7043  
F 403.216.7045

**SENSO**  
Lighting

512 Manitou Road SE, Calgary, Alberta T2G 4C4

### IMPORTANT INSTRUCTIONS

**read and follow these instructions before installing or maintaining this product**



#### location

- this product is suitable for **DRY INDOOR LOCATIONS ONLY**
- make sure this product is NOT on the same circuit as inductive loads, (e.g. fluorescent bulbs, discharge bulbs, ventilation fans, etc...)
- allow air to flow freely around the fixture
- **DO NOT INSTALL INSULATION WITHIN 3" (76mm) OF THE FIXTURE**
- ceiling thickness must be between 1/8" and 1" (3mm and 25.4mm)

#### safety

- Do not switch on line voltage until all wiring has been complete
- Incorrect wiring will result in irreparable damage to the LED and power supply
- This product should only be installed by a licensed electrician

### INSTALLATION

**switch off the line voltage supply**

- A** cut a hole according to dimension
- B** connect wire to power supply (see diagram)
- C** flip the retention springs upward
- D** push the fixture in place

### WARRANTY

- This product must be installed in accordance with all applicable installation codes and ordinance
- Limited two (2) years warranty
- Warranty is void in the eventuality of unauthorized modifications and/or improper use